



Sennheiser Assisted Hearing Headset User Guide

Setting the receiver to the frequency of the transmission system

You can set the receiver to the frequency of the transmission system yourself or have the frequency preset by your Sennheiser partner.

Switching the receiver on and off.




- **Pull the stalks gently** apart.


The receiver switches on automatically.

- **Take the receiver off.** The receiver switches off automatically after 30 seconds.

Adjusting the volume

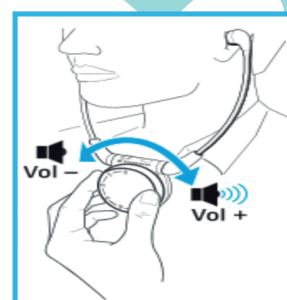

- **Use the volume control** ² to adjust the volume to a sufficient and comfortable level.

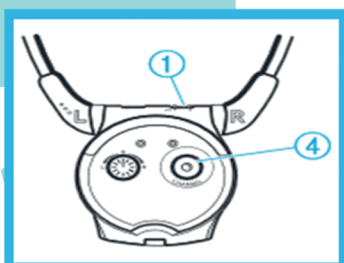

To set a frequency on the receiver:

- **Put the receiver on.**

- **Press the channel selection button** ⁴ until you have found the frequency of your transmission system.

On the receiver, the channel indicator ¹ can light up as follows:

Channel light indicator settings

- **| Left** General Audio
- **|| Left & Right** split between General in one ear and AD in the other
- **| Right** Audio description

Please ask a member of staff if you require any further assistance.