

Sennheiser Mobileconnect User Guide

**Download the
free mobile app**



**Connect to the local
Mobileconnect wifi
network inside the
theatre.**


Welcome to the Lyric Theatre
You are connected to
the MobileConnect network.
Please choose a channel.

**Activate the
function on your
device.**

Activate ☒ ON

**Select your
channel for
personal hearing.**

**Ambient sound
Audio description**

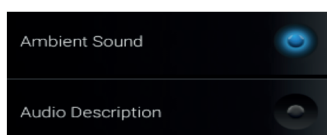


Adjust the sound.

Adjust >

**Move the blue circle
on the screen to
adjust the sound
and volume.**

**Left and right -
base and treble
Up and down -
volume**



**Please ask a member of staff if you
require any further assistance.**